



Disassemble, Disconnect and Recycle Tron 40S mkII

<p>Remove seal and pin</p>	<p>Remove «U-bolt»</p>	<p>Remove Equator Belt</p>
<p>Open</p>	<p>Disconnect Battery connector</p>	<p>Cut with a carpet knife (Makes the electronics unusable)</p>

Recycle the different parts:

Part	How	Note
1	Battery Do NOT throw in waste bin, but recycle as "Haz.mat" (Dangerous goods). - Europe: According to Directive 2006/66/EC - USA: The Big Green box	Contains high energy Lithium Metal batteries of type SAFT LSH-14 light, see MSDS/PSDS (2011) here . and Battery Information sheet here .
2	Electronics Do NOT throw in waste bin, but recycled according to legal procedures regarding waste electronic: - Europe: WEEE – see more info: 1) http://ec.europa.eu/environment/waste/weee/index_en.htm 2) http://erp-recycling.org/ - USA: http://www.epa.gov/epawaste/conserve/materials/recycling/index.htm	May contain: <ul style="list-style-type: none"> • Lead (Pb) • Copper(Cu) • Tin (Sn) • Other metals
3	Plastic Contains mostly Polycarbonate (Lexan) , see information on plastic recycling here: http://en.wikipedia.org/wiki/Plastic_recycling	