





## TECHNICAL BULLETIN TB06-2014

### Regarding: Mounting Lanyard on Tron 40VDR

The Lanyard on the Tron40VDR may be exchanged due to wear or age, and below is the procedure to mount a new lanyard.

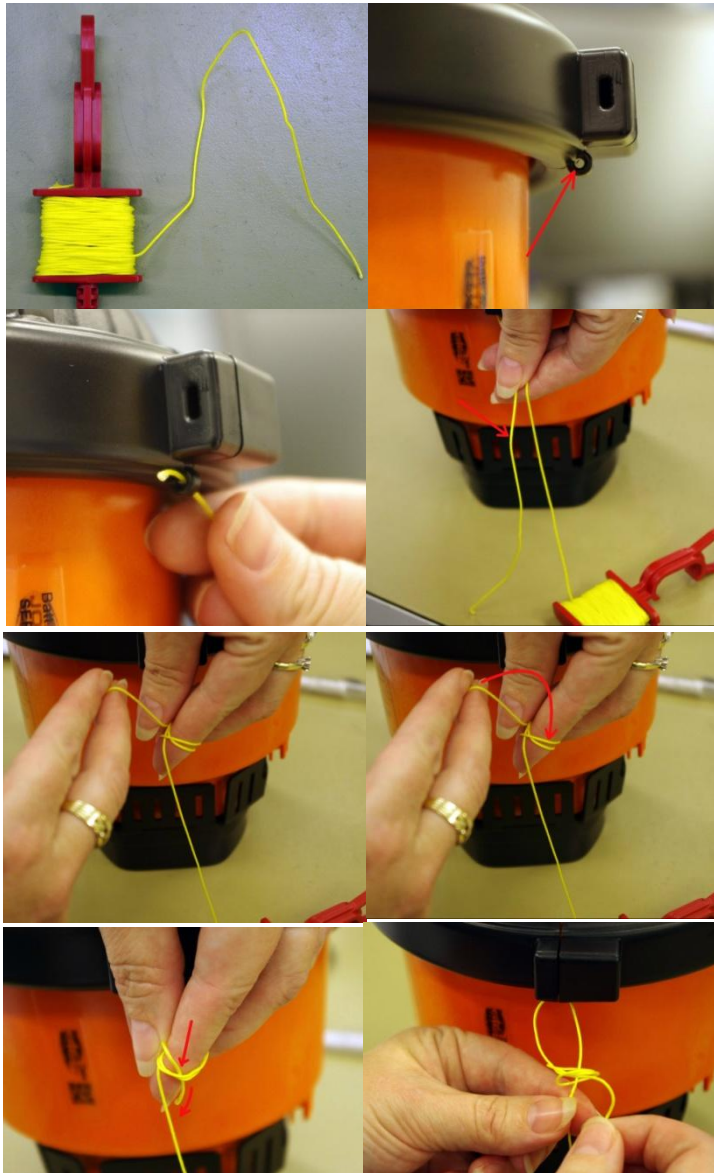

- Loosen the end of the new lanyard spool and locate small hole below the equator belt
- Thread the end though the hole and pull approximate 7-8 cm through as shown
- The end of the yellow lanyard (Picture #4) marked with a red arrow shall then be twisted twice around your finger (picture #5)
- Then the loose end shall be threaded within the loops around your finger

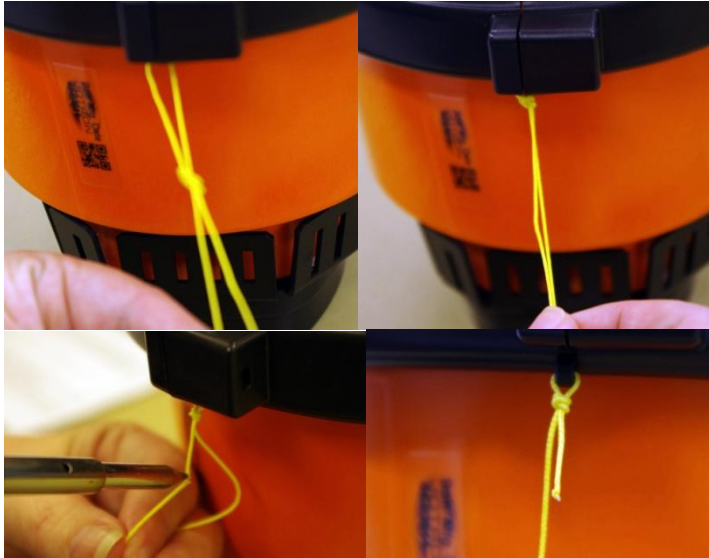

- Then pull both ends until the knot tightens under equator belt
- Then use a soldering iron or Electric rope cutter hot knife to cut and seal the end of the lanyard



- New lanyard fitted correctly to Tron 40VDR